

# MACX MCR-EX-SL-2NAM-RO(-SP)



## NAMUR signal conditioner, Ex i, 2-channel, with relay output

Data sheet  
103464\_en\_05

© Phoenix Contact 2022-12-15

### 1 Description

Signal conditioners are used for transfer of binary switching signals from the Ex area.

The NAMUR signal conditioner has been designed for the intrinsically safe operation of proximity sensors (in accordance with EN 60947-5-6 NAMUR) and open circuit or resistance circuit contacts and switches.

The input circuit is monitored for line faults (breakage and short circuit (LFD)) (can be switched on/off).

Errors are indicated by a red flashing LED (as per NE 44) and the output switches to a high-impedance state. Error messages can also be transmitted to the supply and error evaluation module via the DIN rail connector.

Each channel has an NO contact relay as a signal output.

The DIP switches can be used to set the direction of action (open or closed circuit current behavior).

The status of the respective channel is signaled via a yellow LED.

The module is suitable for safety-related applications up to SIL 2 according to IEC/EN 61508.

### Features

- 2-channel
- Intrinsically safe inputs for NAMUR proximity sensors or switch contacts [Ex ia]
- Outputs: one N/O contact relay per channel
- Direction of operation can be selected
- Line fault detection (LFD) can be enabled/disabled
- Up to SIL 2 according to IEC/EN 61508
- Safe 3-way electrical isolation
- Energy supply and error indication possible via DIN rail connector
- Installation in Ex zone 2 permitted
- Plug-in connection terminal blocks, either screw or spring-cage connection technology (Push-in Technology)
- Housing width of 12.5 mm



Make sure you always use the latest documentation. It can be downloaded from the product at [phoenixcontact.net/products](https://phoenixcontact.net/products).

This document is valid for the products listed in the "Ordering data".

**2 Table of contents**

1	Description .....	1
2	Table of contents .....	2
3	Ordering data .....	3
4	Technical data .....	6
5	Safety regulations and installation notes.....	10
6	Installation .....	12
7	Configuration .....	16
8	Comparison of the safety data .....	18
9	Safety-related applications (IEC 61508 Edition 2) .....	19
10	Safety-related applications (IEC 61508 Edition 1) .....	25

### 3 Ordering data

Description	Type	Item no.	Pcs./Pkt.
Ex i NAMUR isolating amplifier, 2-channel. For operating proximity sensors and switches in Ex areas. The signals are transmitted via relay outputs (N/O contact) to the safe area. Line fault detection (LFD), 3-way isolation, SIL 2.	MACX MCR-EX-SL-2NAM-RO	2865476	1
Ex i NAMUR isolating amplifier, 2-channel. For operating proximity sensors and switches in Ex areas. The signals are transmitted via relay outputs (N/O contact) to the safe area. Line fault detection (LFD), 3-way isolation, SIL 2.	MACX MCR-EX-SL-2NAM-RO-SP	2924087	1
Accessories	Type	Item no.	Pcs./Pkt.
DIN rail connector (TBUS), 5-pos., for bridging the supply voltage, can be snapped onto NS 35/... DIN rail in accordance with EN 60715	ME 6,2 TBUS-2 1,5/5-ST-3,81 GY	2695439	10
Universal Termination Carrier for connecting 16 two-channel MACX Analog Ex i signal conditioners to digital or analog I/O cards, via two D-SUB connectors, 37-pos. (1:1 connection)	TC-2D37SUB-ADIO32-2EXP-UNI	2904684	1
Power and fault signaling module with screw connection, including corresponding ME 17,5 TBUS 1,5/ 5-ST-3,81 GY DIN rail connector	MACX MCR-PTB	2865625	1
Power and fault signaling module with Push-in connection, including corresponding ME 17,5 TBUS 1,5/ 5-ST-3,81 GY DIN rail connector	MACX MCR-PTB-SP	2924184	1
Primary-switched power supply unit, QUINT POWER, Screw connection, DIN rail mounting, input: 1-phase, output: 24 V DC / 2.5 A	QUINT4-SYS-PS/1AC/24DC/2.5/SC	2904614	1
End cover, length: 56 mm, width: 2.5 mm, height: 52 mm, color: gray	D-UKK 3/5	2770024	50
End cover, length: 56 mm, width: 2.5 mm, height: 62 mm, color: blue	D-UKK 3/5 BU	2770105	50
Double-level terminal block, with preassembled resistors	UKK 5-2R/NAMUR	2941662	50
Insulating sleeve, color: white	MPS-IH WH	0201663	10
Insulating sleeve, color: red	MPS-IH RD	0201676	10
Insulating sleeve, color: blue	MPS-IH BU	0201689	10
Insulating sleeve, color: yellow	MPS-IH YE	0201692	10
Insulating sleeve, color: green	MPS-IH GN	0201702	10
Insulating sleeve, color: gray	MPS-IH GY	0201728	10
Insulating sleeve, color: black	MPS-IH BK	0201731	10
Test plugs, with solder connection up to 1 mm <sup>2</sup> conductor cross section, color: gray	MPS-MT	0201744	10

Accessories	Type	Item no.	Pcs./Pkt.
Plastic label, Sheet, white, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9)	0819291	10
Plastic label, Sheet, yellow, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9) YE	0822602	10
Plastic label, can be ordered: by sheet, white, labeled according to customer specifications, mounting type: adhesive, lettering field size: 11 x 9 mm	UC-EMLP (11X9) CUS	0824547	1
Plastic label, can be ordered: by sheet, yellow, labeled according to customer specifications, mounting type: adhesive, lettering field size: 11 x 9 mm	UC-EMLP (11X9) YE CUS	0824548	1
Plastic label, Sheet, silver, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9) SR	0828094	10
Plastic label, can be ordered: by sheet, silver, labeled according to customer specifications, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9) SR CUS	0828098	1
Plastic label, Card, white, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 135	US-EMLP (11X9)	0828789	10
Plastic label, Card, yellow, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 135	US-EMLP (11X9) YE	0828871	10
Plastic label, Card, silver, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 135	US-EMLP (11X9) SR	0828872	10

Accessories	Type	Item no.	Pcs./Pkt.
Device marker, Sheet, white, unlabeled, can be labeled with: TOPMARK NEO, TOPMARK LASER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 255	LS-EMLP (11X9) WH	0831678	10
Device marker, Sheet, silver, unlabeled, can be labeled with: TOPMARK NEO, TOPMARK LASER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 255	LS-EMLP (11X9) SR	0831705	10
Device marker, Sheet, yellow, unlabeled, can be labeled with: TOPMARK NEO, TOPMARK LASER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 255	LS-EMLP (11X9) YE	0831732	10

## 4 Technical data

Input data NAMUR	
Description of the input	Intrinsically safe
Input signals	NAMUR proximity sensors (IEC/EN 60947-5-6) Floating switch contacts Switch contacts with resistance circuit
Short-circuit current	8 mA
Switching hysteresis	< 0.2 mA
Line fault detection	< 0.05 mA ... 0.35 mA (Line break) < 100 Ω ... 360 Ω (Short circuit) Activated /deactivated via DIP switch
Non-load voltage	8 V DC
Switching threshold "0" signal current	< 1.2 mA (blocking)
Switching threshold "1" signal, current	> 2.1 mA (conductive)
Output data Relay output	
Number	2
Contact type	1 N/O contact per channel
Contact material	AgSnO <sub>2</sub> , hard gold-plated
Switching behavior	can be inverted using DIP switch
Maximum switching voltage	250 V AC (2 A) 120 V DC (0.2 A) 30 V DC (2 A)
Switching frequency	≤ 20 Hz (without load)
General data	
Nominal supply voltage	24 V DC -20 % ... +25 %
Supply voltage range	19.2 V DC ... 30 V DC
Max. current consumption	35 mA (24 V DC)
Power dissipation	< 1 W
Power consumption	0.8 W
Degree of protection	IP20 (not assessed by UL)
Flammability rating according to UL 94	V0 (Housing)
Status display	Green LED (supply voltage) LED yellow (switching state) Red LED (line errors)
Dimensions W/H/D	12.5 mm / 112.5 mm / 113.7 mm (MACX MCR-EX-SL-2NAM-RO) 12.5 mm / 116 mm / 113.7 mm (MACX MCR-EX-SL-2NAM-RO-SP)
Depth ( Snapped onto DIN rail NS 35/7,5 in accordance with EN 60715 )	114.5 mm
Type of housing	PA 6.6-FR

**Ambient conditions**

Ambient temperature (operation) -40 °C ... 60 °C (Any mounting position)

Ambient temperature (storage/transport) -40 °C ... 85 °C

Permissible humidity (operation) 10 % ... 95 % (non-condensing)

Altitude range

Altitude ≤ 2000 m

Ambient temperature (operation) -40 °C ... 60 °C

Rated insulation voltage 375 V<sub>PP</sub> (Power supply, input / output)

Altitude range

Height range > 2000 m ... 3000 m

Ambient temperature (operation) -40 °C ... 54 °C

Rated insulation voltage 190 V AC (Power supply, input / output)

Rated insulation voltage 110 V DC (Power supply, input / output)

Altitude range

Height range > 3000 m ... 4000 m

Ambient temperature (operation) -40 °C ... 48 °C

Rated insulation voltage 60 V AC/DC (Power supply, input / output)

Altitude range

Height range > 4000 m ... 5000 m

Ambient temperature (operation) -40 °C ... 42 °C

Rated insulation voltage 60 V AC/DC (Power supply, input / output)

**Electrical isolation ( ≤ 2000 m )**

Electrical isolation 3-way isolation

Input/output

Electrical isolation 375 V (Peak value in accordance with IEC/EN 60079-11)

Overvoltage category III

Degree of pollution 2

Input/supply, DIN rail connector

Electrical isolation 375 V (Peak value in accordance with IEC/EN 60079-11)

Rated insulation voltage 300 V<sub>rms</sub>

Overvoltage category II

Degree of pollution 2

Insulation Safe isolation in accordance with IEC/EN 61010-1

Output 1/output 2/input, power supply, DIN rail connector

Rated insulation voltage 300 V<sub>rms</sub>

Overvoltage category III

Degree of pollution 2

Insulation Safe isolation in accordance with IEC/EN 61010-1

Output 1/output 2/input/power supply, DIN rail connector

Test voltage 2.5 kV AC (50 Hz, 60 s)

Overvoltage category III

Degree of pollution 2

Connection data	Screw connection	Push-in connection
Conductor cross section, rigid	0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>	0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup>
Conductor cross section, flexible	0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>	0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup>
Conductor cross section AWG	24 ... 14	24 ... 16
Stripping length	7 mm	8 mm
Tightening torque	0.5 Nm ... 0.6 Nm	

**Safety data in accordance with ATEX and IECEx ( ≤ 2000 m )**

Max. output voltage $U_o$	9.6 V
Max. output current $I_o$	10 mA
Max. output power $P_o$	25 mW
Max. external inductivity $L_o$ / Max. external capacitance $C_o$ simple circuit	IIC : 300 mH / 3.6 $\mu$ F
Max. external inductivity $L_o$ / Max. external capacitance $C_o$ mixed circuit	IIC : 100 mH / 500 nF ; 50 mH / 570 nF ; 5 mH / 590 nF ; 1 mH / 590 nF ; 10 $\mu$ H / 590 nF
Max. external inductivity $L_o$ / Max. external capacitance $C_o$ simple circuit	IIB/IIIC : 1000 mH / 26 $\mu$ F
Max. external inductivity $L_o$ / Max. external capacitance $C_o$ mixed circuit	I/IIB/IIA/IIIC : 100 mH / 1 $\mu$ F ; 5 mH / 1 $\mu$ F ; 1 mH / 1 $\mu$ F ; 10 $\mu$ H / 1 $\mu$ F
Max. external inductivity $L_o$ / Max. external capacitance $C_o$ simple circuit	IIA/I : 1000 mH / 210 $\mu$ F
Max. internal inductance $L_i$	negligible
Max. internal capacitance $C_i$	11 nF
Safety-related maximum voltage $U_m$	253 V AC
Safety-related maximum voltage $U_m$	125 V DC

**Conformance with EMC directive**

Noise immunity according to EN 61000-6-2

Noise emission according to EN 61000-6-4



**Conformance/Approvals**

CE  
CE-compliant  
and EN 61326

ATEX  
IBExU 07 ATEX 1069 X

Ⓢ II (1) G [Ex ia Ga] IIC  
Ⓢ II (1) D [Ex ia Da] IIIC  
Ⓢ II 3(1) G Ex ec nC [ia Ga] IIC T4 Gc  
Ⓢ I (M1) [Ex ia Ma] I

UKCA Ex (UKEX)  
CML 22UKEX7421X

Ⓢ I (M1) [Ex ia Ma] I  
Ⓢ II (1) G [Ex ia Ga] IIC  
Ⓢ II (1) D [Ex ia Da] IIIC  
Ⓢ II 3 (1) G Ex ec [ia Ga] nC IIC T4 Gc

IECEX  
IECEX IBE 08.0001X

[Ex ia Ga] IIC  
[Ex ia Da] IIIC  
Ex ec nC [ia Ga] IIC T4 Gc  
[Ex ia Ma] I

CCC / China-Ex  
NEPSI GYJ20.1311X

[Ex ia Ga] IIC  
[Ex iaD]  
Ex nA nC [ia Ga] IIC T4 Gc

UL, USA / Canada  
Ⓢ, C.D.-No 83104549

UL 61010 Listed  
Class I, Div. 2, Groups A, B, C, D T4  
Class I, Div. 2, Groups IIC, IIB, IIA T4  
Associated apparatus for use in Class I, Division 1, Groups A,B,C,D  
Associated apparatus for use in Class II, Div.1 Groups E,F,D  
Associated apparatus for use in Class III, Division 1  
Associated apparatus for use in Class I, Zone 0,1,2, Groups IIC,IIB,IIA

KC-s  
17-KA4BO-0410X

[Ex ia] IIC/IIB

Shipbuilding approval  
DNV GL TAA00000AG  
Temperature  
Humidity  
Vibration  
EMC  
Enclosure

B  
B  
A  
B  
Required protection according to the Rules shall be provided upon installation on board

Safety Integrity Level (SIL, IEC 61508)

2

EAC Ex  
RU C-DE.AB72.B.00093/19

Ⓢ [Ex ia Ga] IIC  
Ⓢ [Ex ia Da] IIIC

INMETRO  
DNV 18.0114 X

[Ex ia Ga] IIC  
[Ex ia Da] IIIC  
Ex ec nC [ia Ga] IIC T4 Gc  
[Ex ia Ma] I

## 5 Safety regulations and installation notes

### 5.1 Installation notes

- The device is an item of associated equipment with an EPL [Ga], [Da] (category 1) with "intrinsic safety" type of protection and can be installed in zone 2 potentially explosive areas as an EPL Gc (category 3) device. Intrinsically safe circuits can be led up to zone 0 / zone 20. It satisfies the requirements of the following standards. IEC/EN 60079-0, IEC/EN 60079-7, IEC/EN 60079-11, and IEC/EN 60079-15  
ABNT NBR IEC 60079-0, ABNT NBR IEC 60079-7, ABNT NBR IEC 60079-11, ABNT NBR IEC 60079-15  
GB 3836.1, GB 12476.1, GB 3836.4, GB 12476.4, GB 3836.8, GB 3626.20  
For detailed information, please refer to the declarations of conformity.
- Installation, operation, and maintenance may only be carried out by qualified electricians. Follow the installation instructions as described.
- When installing and operating the device, observe the applicable regulations and safety directives (including national safety directives), as well as the generally recognized technical regulations.
- Observe the safety information, conditions, and limits of use specified in the product documentation. Comply with them.
- The device must not be opened or modified. Do not repair the device yourself, replace it with an equivalent device. Repairs may only be carried out by the manufacturer. The manufacturer is not liable for damage resulting from violation.
- The IP20 degree of protection (IEC/EN 60529) specifies that the device is intended for use in a clean and dry environment. Do not subject the device to mechanical and/or thermal stress that exceeds the specified limits.
- The device complies with the EMC regulations for industrial areas (EMC class A). When using the device in residential areas, it may cause radio interference.
- The device must be stopped if it is damaged, has been subjected to an impermissible load, stored incorrectly, or if it malfunctions.
- The products must be installed in accordance with all applicable standards for electrical systems in potentially explosive areas.
- A SELV/PELV power supply unit with a nominal voltage of 24 V DC (max. 30 V DC) is needed for the external power supply of the device.
- Only use copper connecting cables.

### 5.2 Intrinsic safety

- The device is approved for intrinsically safe (Ex i) circuits up to zone 0 (gas) and zone 20 (dust) in the Ex area. The safety technology values for intrinsically safe equipment and the connecting lines must be observed for the hook-up process (IEC/EC 60079-14) and the values specified in this installation note and/or the EU examination certificate must be observed.
- When carrying out measurements on the intrinsically safe side, observe the relevant regulations regarding the connection of intrinsically safe equipment. Use only these approved measuring devices in intrinsically safe circuits.
- If the device was used in circuits which are not intrinsically safe, it is forbidden to use it again in intrinsically safe circuits. Label the device clearly as being not intrinsically safe.

### 5.3 Installation in the Ex area (zone 2)

- Observe the specified conditions for use in potentially explosive areas. Install the device in a suitable approved housing with at least IP54 protection that meets the requirements of IEC/EN 60079-15 or another type of protection in accordance with ABNT NBR IEC 60079-0, Section 1. Also observe the requirements of IEC/EN 60079-14.
- Only devices which are designed for operation in Ex zone 2 and are suitable for the conditions at the installation location may be connected to the circuits in the Ex zone.
- In potentially explosive areas, connecting and disconnecting cables and plugs in non-intrinsically safe circuits, the latching of devices onto and unlatching devices from the DIN rail connector, and the actuation of DIP switches is only permitted in a de-energized state or when the atmosphere is not potentially explosive.
- The device must be stopped and immediately removed from the Ex area if it is damaged, was subject to an impermissible load, stored incorrectly or if it malfunctions.
- Temporary malfunctions (transients) must not exceed the value of 497 V (355 V x 1.4).
- The specified ambient temperature range of  $-40^{\circ}\text{C} \leq T_{\text{amb}} \leq +60^{\circ}\text{C}$  refers to the temperature inside the housing.

#### **5.4 Installation in areas with a danger of dust explosions (zone 22)**

- The device is not suitable for installation in zone 22.
- If, however, you wish to use the device in zone 22, you must install it in housing that complies with IEC/EN 60079-31. When doing so, observe the maximum surface temperatures. Observe the requirements of IEC/EN 60079-14.
- Connection to the intrinsically safe circuit in areas with a danger of dust explosions (zone 20, 21 or 22) is only permitted if the equipment connected to this circuit is approved for this zone (e.g., category 1D, 2D or 3D).

#### **5.5 Safety-related applications (SIL)**

When using the device in safety-related applications, observe the instructions in "Safety-related applications", as the requirements differ for safety-related functions.

#### **5.6 UL note**

The safety specifications, which are based on UL approval, can be found in the "Control Drawing". The "Control Drawing" is part of the package slip.

## 6 Installation

### 6.1 Connection notes



#### **WARNING: Electrical danger due to improper installation**

Observe the connection notes for safe installation in accordance with EN/UL 61010-1:

- Disconnecting devices and branch circuit protection with suitable AC or DC rating shall be provided in the building installation.
- The device is intended for installation in a control cabinet or in a comparable enclosure. The device may only be operated when it has been installed. The control cabinet must meet the requirements of UL/IEC 61010-1 in terms of protection against spread of fire and protection against electric shock or burn.
- Provide a switch/circuit breaker close to the device that is labeled as the disconnect device for this device (or the entire control cabinet).
- Provide overcurrent protection ( $I \leq 16 \text{ A}$ ) within the installation.
- To protect the device against mechanical or electrical damage, install it in a suitable housing with appropriate degree of protection as per IEC 60529.
- During installation, servicing, and maintenance work, disconnect the device from all effective power sources, provided you are not dealing with SELV or PELV circuits.
- If the device is not used as described in the documentation, the intended protection can be negatively affected.
- Thanks to its housing, the device has basic insulation to the neighboring devices, for  $300 \text{ V}_{\text{eff}}$ . If several devices are installed next to each other, this has to be taken into account, and additional insulation has to be installed if necessary! If the neighboring device is equipped with basic insulation, no additional insulation is necessary.
- The voltages applied at the input, output, and power supply are extra-low voltages (ELV). Depending on the application, the switching voltage at the relay output may be a hazardous contact voltage ( $> 30 \text{ V AC}/> 60 \text{ V DC}$ ). Safe electrical isolation from other connections exists for such cases.



#### **WARNING: Explosion hazard**

If the device has been used in non-intrinsically safe circuits, it must not be used again in intrinsically safe circuits.

The device must be clearly marked as non-intrinsically safe.

### 6.2 Electrostatic discharge




#### **NOTE: Electrostatic discharge**

The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD) according to EN 61340-5-1 and IEC 61340-5-1.

### 6.3 Structure


Figure 1 Structure

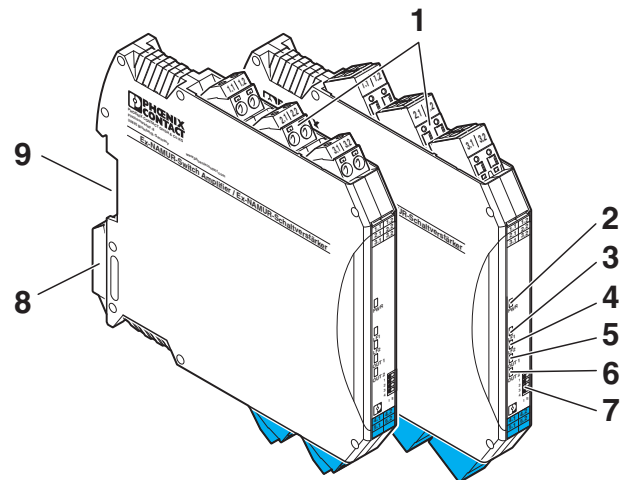

- 1 COMBICON plug-in screw or push-in connection terminal
- 2 Green "PWR" LED, power supply
- 3 Red "LF1" LED, line fault on sensor line 1
- 4 Red "LF2" LED, line fault on sensor line 2
- 5 Yellow "OUT1" LED, status of relay 1
- 6 Yellow "OUT2" LED, status of relay 2
- 7 Switch DIP 1 ... DIP 4
- 8 Snap-on foot for DIN rail mounting
- 9 Connection option for DIN rail connector

### 6.4 Basic circuit diagram with connection terminal blocks

Figure 2 Basic circuit diagram

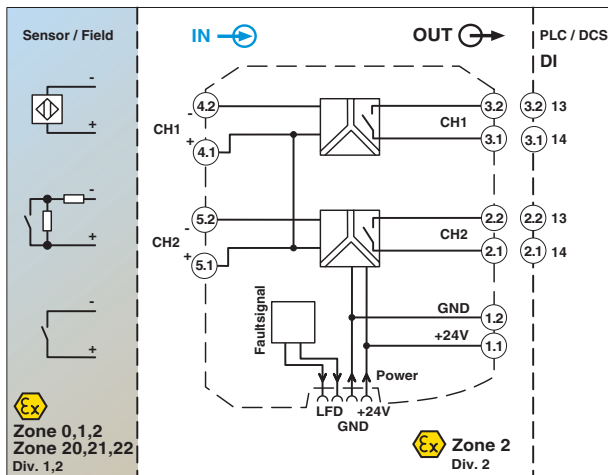

### 6.5 Inputs (intrinsically safe)

Connection of proximity sensors (in accordance with IEN 60947-5-6 NAMUR) and switch contacts with open circuit or resistance circuits, as well as switches

Channel 1: terminals 4.1 (+) and 4.2 (-)

Channel 2: terminals 5.1 (+) and 5.2 (-)

### 6.6 Outputs

One relay output (N/O contact) per channel

Channel 1: terminals 3.1 (+) and 3.2 (-)

Channel 2: terminals 2.1 (+) and 2.2 (-)

### 6.7 Power supply

You must refer to the "MACX and MINI Analog power manual" for the design of the power supply; it is available to download at phoenixcontact.net/products under the item listing.

The supply voltage can be supplied via connection terminal blocks 1.1 (+) and 1.2 (-) or via the DIN rail connector.



#### NOTE

Never connect the supply voltage directly to the DIN rail connector. It is not permitted to draw power from the DIN rail connector or from individual modules.

#### Supply via the MACX Analog Ex module

Where the total current consumption of the aligned modules does not exceed 400 mA, the power can be supplied directly at the connection terminal blocks of the module.

Up to 16 modules can be supplied depending on the current consumption of the modules.

We recommend connecting a 630 mA fuse (normal-blow or slow-blow) upstream.

#### Supply via power and error message module

The MACX MCR-PTB (Item No. 2865625) or the MACX MCR-PTB-SP (Item No. 2924184) supply and error message module is used to provide the supply voltage to the DIN rail connector.


Simple or redundant diode-decoupled power supply is possible.

Depending on the current consumption of the modules, up to 150 individual modules can be supplied by a supply that is protected by a fuse.

The module has integrated error evaluation. An auxiliary supply failure or fuse fault is indicated at a relay contact and displayed via a flashing LED.


## 6.8 Dimensions

Figure 3 Dimensions

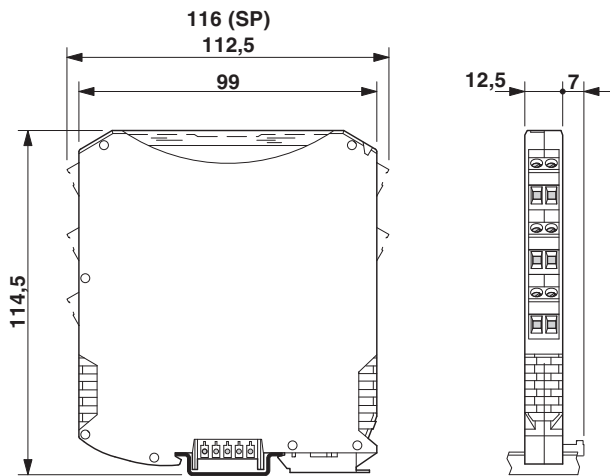

## 6.9 Mounting

Figure 4 Mounting and removing

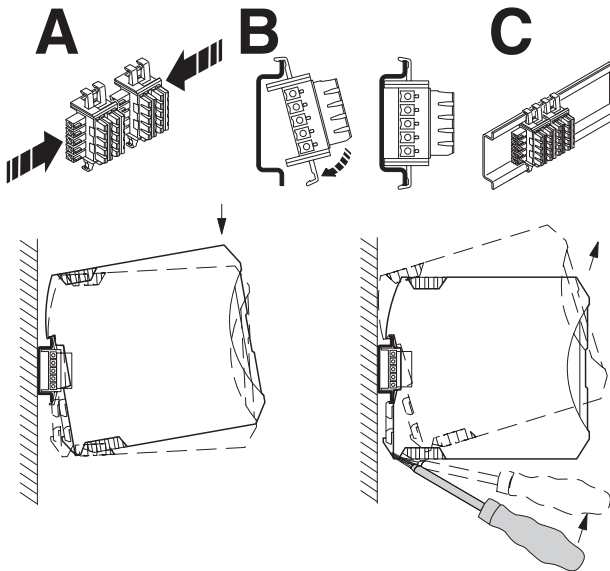


- Mount the device on a 35 mm DIN rail in accordance with EN 60715.
- When using the DIN rail connector, first insert it in the 35 mm DIN rail in accordance with EN 60715 (A – C). DIN rails with a height of 7.5 mm or more can be used. The DIN rail connector is used to bridge the power supply and communication.
- The snap-in direction of the device and DIN rail connector must be observed: snap-on foot on the bottom and plug on the left.
- Install the module in a suitable housing to meet the requirements for the protection class.

## 6.10 Connecting the cables

### Screw Connection


Figure 5 Screw connection

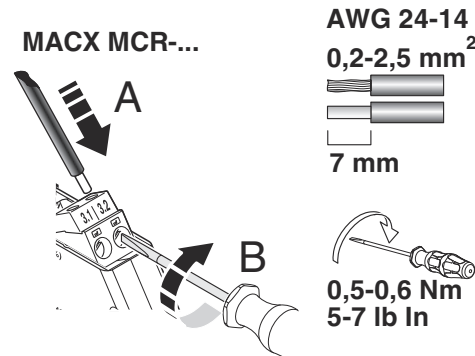

- Strip the wire by approximately 7 mm and crimp ferrules to the end of the wires.
- Insert the wire into the corresponding connection terminal block.
- Use a screwdriver to tighten the screw in the opening above the connection terminal block. Tightening torque: 0.6 Nm

### Push-in connection

Figure 6 Push-in connection

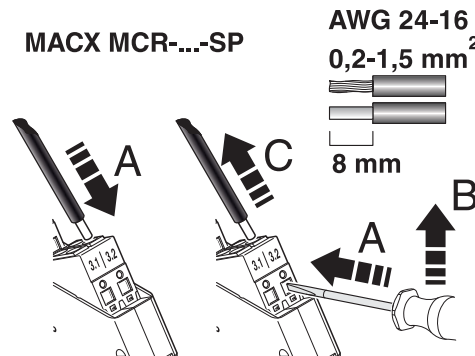

If you want to use conductors with ferrule:

- Strip the wire by approximately 8 mm and crimp ferrules to the end of the wires.
- Insert the wire into the corresponding connection terminal block.
- Push in the pushbutton with a screwdriver to release.

If you want to use conductors without ferrule:

- Push the pushbutton in with a screwdriver.
- Insert the wire into the corresponding connection terminal block.
- Push in the pushbutton with a screwdriver to release.

### 6.11 Group error message

Line fault messages from NAMUR signal conditioners that are connected via DIN rail connectors are reported as a group error message by the MACX MCR-PTB(-SP) power and fault signaling module via a relay output and indicated via a flashing LED.

### 6.12 Startup

- Before startup, check that the device is operating and wired correctly, in particular with regard to the wiring and marking of the intrinsically safe circuits.

## 7 Configuration




**NOTE**

In zone 2, the DIP switches may only be actuated when the power is disconnected or when an explosive atmosphere is not present.

By default upon delivery, all DIP switches are in the “I” position.

Figure 7 DIP switches

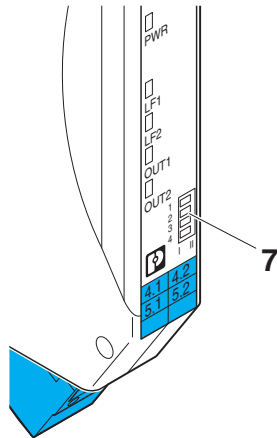

### 7.1 Effective direction (switch DIP 1 = channel 1, DIP 3 = channel 2)

The direction of action is set with DIP switch DIP 1 (for channel 1) and DIP 3 (for channel 2).

Channel 1	Channel 2	
DIP 1	DIP 3	Normal phase (I)
DIP 1	DIP 3	Inverse phase (II)

Relay output	Normal phase (I)	Inverse phase (II)
Switched when	$I > 2.1 \text{ mA}$	$I < 1.2 \text{ mA}$
In normal position when	$I < 1.2 \text{ mA}$	$I > 2.1 \text{ mA}$

### 7.2 Line fault detection (switch DIP 2 = channel 1, DIP 4 = channel 2)

Line fault detection is enabled using DIP switch DIP 2 (for channel 1) and DIP 4 (for channel 2).

I = Line fault detection disabled - (**not permitted for safety-related applications**)

II = Line fault detection enabled

When line fault detection is enabled, the relay drops out in the event of a cable interrupt or short circuit to the sensor so that the output is set to the safe, non-conductive state.

The red LED (LF) flashes (NAMUR NE 44).

Operating range in accordance with EN 60947-5-6 for line fault indication:

Cable break	$0.05 \text{ mA} < I_{IN} < 0.35 \text{ mA}$
Short-circuit	$100 \Omega < R_{\text{Sensor}} < 360 \Omega$


If the module is connected to a MACX MCR-PTB(-SP) power module via a DIN rail connector, a group error message is also reported to the higher-level evaluation unit via a floating relay output.



**NOTE**

For switch contacts with open circuit, line fault detection (LF) must be disabled or the corresponding resistance circuit (e.g., UKK 5-2R/NAMUR (Item No. 2941662) with D-UKK 3/5 (Item No. 2770024)) must be provided directly at the contact.

Figure 8 Switch contact with open circuit, switch contact with resistance circuit

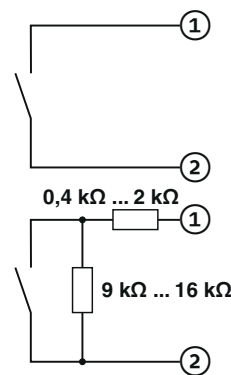



7.3 Truth table



**WARNING:**

For safety-related applications, only the switch position “DIP 2/DIP 4 = II” is permitted.

For safety-related applications, only switch contacts with resistance circuits are permitted at the input.

Sensor in input			Input circuit	DIP switch				Output	LED		Permitted for safety-related applications
Switch	Switch contacts with resistance circuit	NAMUR		State	Channel 1		Channel 2		Relay contact	OUT	
			1		2	3	4	N/O contact			
Open	Open	Blocking	OK	I	I	I	I	Open			No
Closed	Closed	Conductive	OK	I	I	I	I	Closed	X		No
Open	Open	Blocking	OK	II	I	II	I	Closed	X		No
Closed	Closed	Conductive	OK	II	I	II	I	Open			No
	Open	Blocking	OK	I	II	I	II	Open			Yes
	Closed	Conductive	OK	I	II	I	II	Closed	X		Yes
	Any	Any	Wire break	I	II	I	II	Open		X	Yes
	Any	Any	Short-circuit	I	II	I	II	Open		X	Yes
	Open	Blocking	OK	II	II	II	II	Closed	X		Yes
	Closed	Conductive	OK	II	II	II	II	Open			Yes
	Any	Any	Wire break	II	II	II	II	Open		X	Yes
	Any	Any	Short-circuit	II	II	II	II	Open		X	Yes

NAMUR: proximity switch in accordance with EN 60947-5-6 (NAMUR) or resistance-circuit switch contact

## 8 Comparison of the safety data



### WARNING: Explosion hazard

Compare the safety data before connecting a device located in the Ex i area to this device.

Provide proof of intrinsic safety according to standard IEC/EN 60079-14 and other national standards and installation specifications, if applicable.

Safety data

Field devices	$U_i, I_i, P_i, L_i, C_i$
Ex i NAMUR signal conditioner	$U_o, I_o, P_o, L_o, C_o$

The values for  $U_o, I_o, P_o, L_o, C_o$  are to be found under "Safety data in accordance with ATEX and IECEx" in the "Technical data" section.

### Example for proof of intrinsic safety

Data	Condition
$U_i \geq U_o$	-
$I_i \geq I_o$	-
$P_i \geq P_o$	-
$L_i + L_c \leq L_o$	$L_i < 1\% \text{ of } L_o \text{ or } C_i < 1\% \text{ of } C_o$
$C_i + C_c \leq C_o$	
$L_i + L_c \leq 0.5 L_o$	$L_i \geq 1\% \text{ of } L_o \text{ and } C_i \geq 1\% \text{ of } C_o$
$C_i + C_c \leq 0.5 C_o$	

$L_c$  and  $C_c$  depend on the cables used.

### Proof of intrinsic safety (simple intrinsically safe circuit)

In a simple intrinsically safe circuit without external concentrated capacitances ( $C_i$ ) and without external concentrated inductances ( $L_i$ ), the full values of  $C_o$  and  $L_o$  can be exploited (see "Safety data as per ATEX and IECEx" in the section "Technical data").

### Proof of intrinsic safety (mixed intrinsically safe circuit)

Condition for the mixed intrinsically safe circuit with external concentrated capacitances ( $C_i$ ) and/or external concentrated inductances ( $L_i$ ):

- $L_i < 1\% \text{ of } L_o$  or  $C_i < 1\% \text{ of } C_o$

Here, the full values of  $C_o$  and  $L_o$  can also be exploited (see "Safety data as per ATEX and IECEx" in the section "Technical data").

- $L_i \geq 1\% \text{ of } L_o$  and  $C_i \geq 1\% \text{ of } C_o$

Values of 50% of  $C_o$  and  $L_o$  are to be used here:

- $C_i + C_c \leq 0.5 C_o$
- $L_i + L_c \leq 0.5 L_o$

To implement longer cables, you can also use the certified value pairs as an alternative to the values reduced by 50%; they can be found under "Safety data as per ATEX and IECEx" in the "Technical data" section.

## 9 Safety-related applications (IEC 61508 Edition 2)

The following notes apply for the devices:

Designation	Item No.
MACX MCR-EX-SL-2NAM-RO	2865476
MACX MCR-EX-SL-2NAM-RO-SP	2924087
MACX MCR-SL-2NAM-RO	2865049
MACX MCR-SL-2NAM-RO-SP	2924294

A hardware assessment (exida FMEDA report) is available for the devices listed above: Phoenix Contact 07/06-39 R005 Version V3, Revision R2; May 2018.

### 9.1 Circuits

#### Input

Permitted for safety-related applications:

- NAMUR sensor (in accordance with EN 60947-5-6)
- Switch contact with resistance circuit (0.4 k $\Omega$  ... 2 k $\Omega$  serial and 9 k $\Omega$  ... 16 k $\Omega$  parallel)

Note: The resistance circuit regulates the behavior of a NAMUR sensor.



#### WARNING:

Switch contacts without resistance circuit are not permitted for safety-related applications.

#### Output

The output state follows the input state, i.e., the safety-related function at the output is dependent on the position of switch DIP 1 (set direction of action).

- |    |                  |  |
|----|------------------|--|
| I  | Normal function  | In the event of a 0 signal (NAMUR sensor in a high-resistance state, therefore low current in the input circuit), the output switches to the “non-conductive” or “open” state. |
| II | Inverse function | In the event of a 1 signal at the input, the output switches to the “non-conductive” or “open” state.  |

### 9.2 Diagnostic function of switch DIP 2

For safety-related applications, line fault detection is enabled, i.e. the switch DIP 2 is in the 'II' position.



#### WARNING:

Switch position “DIP 2 = I” is not permitted for safety-related applications.

When line fault detection is enabled, the red LED indicates any faults that occur. If a line fault is detected, the output is disabled (non-conductive). This behavior is not dependent on the position of switch DIP 1.

### 9.3 Safe state

The “safe state” of the output is the non-conductive state. This means that the N/O contact is open.

If the supply voltage fails or is switched off and if line faults occur, the relay output switches to the safe state.

### 9.4 Response times

Following a state change at the input, the output enters the safe state in  $\leq 40$  ms.

### 9.5 Operating mode

Operating mode in accordance with IEC/EN 61508: “low demand rate” or “high demand rate”

### 9.6 Failure behavior and required response

1. The safe state is entered in the event that a line fault is detected or the supply voltage fails.
2. The safe state is achieved by removing the connection terminal blocks.

## 9.7 Safety integrity requirements

### Safety characteristics in accordance with IEC 61508 Edition 2

- Device type A
- Safety integrity level (SIL) 2
- Systematic Capability (SC) 2
- HFT 0
- 1oo1 architecture
- Low demand mode or high demand mode
- MTTR 24 h
- Mission time 15 years
- Ambient temperature 40°C
- Proof test coverage (PTC) 95%

### List of considered configurations

Configuration	Betrieb	Relay contact	
C1	Not inverted	N/O contact	Load panel IV, up to 250 V AC / 2 A or 30 V DC / 2 A ohmic or low inductive load ( $\cos \phi > 0.95$ )
C2	Not inverted	N/O contact	Load panel II, up to 120 V DC / 0.2 A ohmic or low inductive load ( $\cos \phi > 0.95$ )
C3	Inverted	N/O contact	Load panel IV, up to 250 V AC / 2 A or 30 V DC / 2 A ohmic or low inductive load ( $\cos \phi > 0.95$ )
C4	Inverted	N/O contact	Load panel II, up to 120 V DC / 0.2 A ohmic or low inductive load ( $\cos \phi > 0.95$ )

## 9.8 Failure rates

### Non-inverted operation

Failure rates, safety characteristics

$\lambda_{SD}$	$\lambda_{SU}$	$\lambda_{DD}$	$\lambda_{DU}$	SFF	$DC_{avg}$	MTBF	Function
6 FIT	165 FIT	7 FIT	55 FIT	76 %	9 %	287 years	N/O contact (RNO) C1
6 FIT	230 FIT	7 FIT	90 FIT	72 %	7 %	229 years	N/O contact (RNO) C2

### Low demand rate (low demand mode)

T [PROOF]=	1 year	2 years	4 years	5 years	Function
$PFD_{avg} =$	$2.39 \cdot 10^{-4}$	$4.78 \cdot 10^{-4}$	$9.56 \cdot 10^{-4}$	$1.19 \cdot 10^{-3}$	N/O contact (RNO) C1
$PFD_{avg} =$	$3.92 \cdot 10^{-4}$	$7.84 \cdot 10^{-4}$			N/O contact (RNO) C2

The  $PFD_{avg}$  values for 1, 2, 3, and 4 years are within the permissible range for SIL 2 in accordance with Table 2 of IEC/EN 61508-1. They meet the requirement of not covering more than 10% of the safety circuit or they are better than or equal to  $1.00 \cdot 10^{-3}$ .

The  $PFD_{avg}$  value for 5 years is within the permissible range for SIL 2 in accordance with Table 2 of IEC/EN 61508-1. However, it does not meet the requirement of not covering more than 10% of the safety circuit or is not better than or equal to  $1.00 \cdot 10^{-3}$ .

### Inverted operation

Failure rates, characteristics

$\lambda_{SD}$	$\lambda_{SU}$	$\lambda_{DD}$	$\lambda_{DU}$	SFF	$DC_{avg}$	MTBF	Function
7 FIT	168 FIT	6 FIT	55 FIT	76 %	9 %	286 years	N/O contact (RNO) C3
7 FIT	233 FIT	6 FIT	90 FIT	73 %	6 %	229 years	N/O contact (RNO) C4

### Low demand rate (low demand mode)

T [PROOF]=	1 year	2 years	4 years	5 years	Function
$PFD_{avg} =$	$2.39 \cdot 10^{-4}$	$4.78 \cdot 10^{-4}$	$9.56 \cdot 10^{-4}$	$1.19 \cdot 10^{-3}$	N/O contact (RNO) C3
$PFD_{avg} =$	$3.92 \cdot 10^{-4}$	$7.84 \cdot 10^{-4}$			N/O contact (RNO) C4

Calculation with unrounded values

The  $PFD_{avg}$  values for 1, 2, 3, and 4 years are within the permissible range for SIL 2 in accordance with Table 2 of IEC/EN 61508-1. They meet the requirement of not covering more than 10% of the safety circuit or they are better than or equal to  $1.00 \cdot 10^{-3}$ .

The  $PFD_{avg}$  value for 5 years is within the permissible range for SIL 2 in accordance with Table 2 of IEC/EN 61508-1. However, it does not meet the requirement of not covering more than 10% of the safety circuit or is not better than or equal to  $1.00 \cdot 10^{-3}$ .

### Failure limit

Based on an operating mode with a low demand rate. The percentage of the device at PFH/PFD for the entire safety loop is less than 10%.

Safety circuit according to IEC / EN 61508-1			
Sensor	Device	Processing	Actuator
25 %	< 10 %	15 %	50 %

### High demand rate (high demand mode)

PFH values and key figures

	C1, C3	C2, C4	C1, C3
	250 V AC / 2 A	120 V DC / 0.2 A	24 V DC / 2 A
PFH	$5.46 \cdot 10^{-8}$	$8.96 \cdot 10^{-8}$	$5.46 \cdot 10^{-8}$
Cycles/year	1000	100	1000

The switching frequency during the useful life of the relay should be taken into consideration.

Exception: switching frequency of 1000 cycles/year

Permissible switching frequency: 6/min

### 9.9 Conditions

- The failure rates of the components used remain constant throughout the period of use.
- The propagation of errors by the device in the system is not taken into consideration.
- Errors during parameterization are not taken into consideration.
- The repair time (replacement) should be eight hours.
- The failure rates of the external power supply are not taken into consideration.
- Line fault detection is enabled.
- The average temperature at which the device is to be used is +40°C. In this case, normal industrial conditions are assumed.
- The specified error rates are based on an ambient temperature of +40°C. For an ambient temperature of +60°C, the error rates must be multiplied by factor 2.5. Factor 2.5 is based on guide values.

## 9.10 Installation and startup



**NOTE:** Installation, operation, and maintenance may only be carried out by professionals.

During installation, observe the instructions in the package slip:

Designation	MNR No.
PACKB.MACX MCR-EX-SL-2NAM-RO(-SP)	9040234
PACKB.MACX MCR-SL-2NAM-RO(-SP)	9049386

The package slip is supplied with the device. It can also be downloaded at: [phoenixcontact.net/products](http://phoenixcontact.net/products).

- Configure the device according to your safety demand in accordance with the truth table. Note the switch positions that are not permitted for safety-related applications.
- Connect the device according to the installation notes.
- Check that the device operates correctly with the sensor or switch with resistance circuit connected.
- Start up the safety circuit and check that it operates correctly.

In normal operation, only the green LED (PWR) is permanently on.

The yellow LEDs (OUT1/OUT2) indicate the switching state of the relay output.

When line fault detection is enabled, the red LED (LF) indicates any faults that occur. The safe state is entered in the event of a line fault being detected or a supply voltage failure.

## 9.11 Startup and restart

### Switch on or restart the device

The output enters the state without oscillation (according to the truth table). A reset is not required.

### What happens when a line fault is detected and what must the user do?

The fault is indicated by the red LED and the output enters the "non-conductive" state regardless of the input signal and operating mode (normal or inverse mode).

The user must eliminate the line fault (short circuit or break in the sensor cable).

The device output is not blocked when fault detection is triggered (no lock or reset). Undefined line states that occur during repairs can switch the output. The user must prevent this from happening by disconnecting the supply voltage or removing the connection terminal blocks.

Other options that have the same result and do not present an additional hazard are also permitted.

## The line fault is removed

The user must ensure that a defined state is entered using the truth table. The device is restarted in the same way as during initial startup. The device then behaves as described under "Startup or restart of the device".

## 9.12 Recurring checks

The function of the entire safety loop must be checked regularly according to IEC/EN 61508 and IEC/EN 61511.

The intervals for checking are specified by the intervals of each individual device within the safety loop.

It is the operator's responsibility to select the type of checks and the checking intervals in the specified time period.

Checking must be carried out in such a way that the correct function of the safety equipment in conjunction with all components can be verified.

### Possible procedure for recurring checks for discovering dangerous and undetected device failures

1. Apply an appropriate signal at the input of the device in order to obtain the non-conductive state at the output.
2. Check whether the output is non-conductive.
3. Check the conductive state in the same manner.
4. Restore the safety circuit to full functionality.
5. Resume normal operation.

Around 99% of the possible "du" ("dangerous undetected") failures in the device are discovered with this test.

If the device fails the function test, it must be taken out of operation and the process put into a safe state by other means.

## 9.13 Repair

The devices have a long service life, are protected against malfunctions, and are maintenance-free.

However, if a device should fail, send it back to Phoenix Contact immediately. The type of malfunction and possible cause must also be stated.

Please use the original packaging or other suitable safe packaging when sending devices back for repairs or recalibration.

Phoenix Contact GmbH & Co. KG  
Abteilung Service und Reparatur  
Flachsmarktstr. 8  
32825 Blomberg  
GERMANY

**9.14 Standards**

The devices are developed and tested according to the following standards:

- IEC/EN 61508-1: 2011** Functional Safety of electrical/electronic/programmable electronic safety-related systems - Part 1: General requirements
- IEC/EN 61508-2: 2011** Functional Safety of electrical/electronic/programmable electronic safety-related systems - Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
- IEC/EN 61326-1: 2006** Electrical equipment for measurement, control and laboratory use - EMC requirements

**9.15 Abbreviations**

Abbreviation		Meaning
DC <sub>D</sub>	Diagnostic coverage of dangerous failures	Diagnostic coverage of dangerous failures: $DC_D = \lambda_{DD} / (\lambda_{DU} + \lambda_{DD})$
DC <sub>S</sub>	Diagnostic coverage of safe failures	Diagnostic coverage of safe failures: $DC_S = \lambda_{SD} / (\lambda_{SU} + \lambda_{SD})$
FIT	Failure in time	1 FIT = 1 failure/10 <sup>9</sup> h
HFT	Hardware fault tolerance	Hardware fault tolerance: ability of a function unit to continue with the execution of a demanded function despite existing faults or deviations
λ <sub>D</sub>	Rate of dangerous failures	Proportion of dangerous failures per hour
λ <sub>DD</sub>	Rate of dangerous detected failures	Proportion of detected dangerous failures per hour
λ <sub>DU</sub>	Rate of dangerous undetected failures	Proportion of undetected dangerous failures per hour
λ <sub>S</sub>	Rate of safe failures	Proportion of safe failures per hour
λ <sub>SD</sub>	Rate of safe detectable failures	Proportion of detectable safe failures per hour
λ <sub>SU</sub>	Rate of safe undetectable failures	Proportion of undetectable safe failures per hour
MTBF	Mean time between failures	Mean time between consecutive failures
PFD <sub>avg</sub>	Average probability of failure on demand	Average probability of dangerous failure on demand of a safety function
PFH <sub>D</sub>	Probability of a dangerous failure per hour	Probability of failure per hour for the safety function
SFF	Safe failure fraction	Proportion of safe failures: proportion of failures without the potential to set the safety-related system to a dangerous or impermissible function state
SIL	Safety integrity level	International standard IEC 61508 defines four discrete safety integrity levels (SIL 1 to 4). Each level corresponds to a probability range for the failure of a safety function. The higher the safety integrity level of safety-related systems, the lower the probability that the demanded safety functions will not be performed.



## 10 Safety-related applications (IEC 61508 Edition 1)

The following notes apply for the devices:

Designation	Item No.
MACX MCR-EX-SL-2NAM-RO	2865476
MACX MCR-EX-SL-2NAM-RO-SP	2924087
MACX MCR-SL-2NAM-RO	2865049
MACX MCR-SL-2NAM-RO-SP	2824294

A hardware assessment (FMEDA report) is available for the devices listed above: Exida 07/06-39 R005 V2R2.

### 10.1 Circuits

#### Input

Permitted for safety-related applications:

- NAMUR sensor (in accordance with EN 60947-5-6)
- Switch contact with resistance circuit (0.4 k $\Omega$  ... 2 k $\Omega$  serial and 9 k $\Omega$  ... 16 k $\Omega$  parallel)

Note: The resistance circuit regulates the behavior of a NAMUR sensor.



#### WARNING:

Switch contacts without resistance circuit are not permitted for safety-related applications.

#### Output

The safety-related function at the output is dependent on the position of switches DIP 1 (for channel 1) and DIP 3 (for channel 2).

- |    |                  |  |
|----|------------------|--|
| I  | Normal function  | In the event of a 0 signal (NAMUR sensor in a high-resistance state, therefore low current in the input circuit), the output switches to the "non-conductive" state. |
| II | Inverse function | In the event of a 1 signal at the input, the output switches to the "non-conductive" state.  |

### 10.2 Diagnostic function with switch DIP 2/DIP 4

For safety-related applications, line fault detection is enabled, i.e., switches DIP 2/DIP 4 are in the II position.



#### WARNING:

The "DIP 2/DIP 4 = I" switch position is not permitted for safety-related applications.

When line fault detection is enabled, the red LED indicates any faults that occur. If a line fault is detected, the output is disabled (non-conductive). This behavior is not dependent on the position of the DIP 1 and DIP 3 switches.

### 10.3 Safe state

The "safe state" means that the output is in a non-conductive state, i.e. the relay contact is open.

If the supply voltage fails or is switched off, the relay output goes into the safe state.

### 10.4 Response times

Following a state change at the input, the output enters the safe state in  $\leq 40$  ms.

### 10.5 Operating mode

Operating mode in accordance with IEC/EN 61508: "Low demand mode"

### 10.6 Failure behavior and required response

1. The safe state is entered in the event that a line fault is detected or the supply voltage fails.
2. The safe state is achieved by removing the connection terminal blocks.

### 10.7 Safety integrity requirements

#### Error rates

- Type A device (according to IEC/EN 61508-2)
- Safety integrity level (SIL) 2
- HFT 0
- MTTR 24 h
- 1oo1 structure
- Ambient temperature 40°C

#### Non-inverted operation

Failure rate in FIT

$\lambda_{SD}$	$\lambda_{SU}$	$\lambda_{DD}$	$\lambda_{DU}$	SFF	DC <sub>S</sub>	DC <sub>D</sub>
6	249	7	64	78.3 %	2.4 %	9 %

The MTBF is 204 years.

#### PFD<sub>avg</sub> values

T <sub>[PROOF]</sub> =	1 year	2 years	5 years
PFD <sub>avg</sub> =	3.09 * 10 <sup>-4</sup>	6.17 * 10 <sup>-4</sup>	1.54 * 10 <sup>-3</sup>

#### Inverted operation

Failure rate in FIT

$\lambda_{SD}$	$\lambda_{SU}$	$\lambda_{DD}$	$\lambda_{DU}$	SFF	DC <sub>S</sub>	DC <sub>D</sub>
1	248	6	62	78.2 %	0.4 %	8 %

The MTBF is 204 years.

#### PFD<sub>avg</sub> values

T <sub>[PROOF]</sub> =	1 year	2 years	5 years
PFD <sub>avg</sub> =	3.01 * 10 <sup>-4</sup>	6.02 * 10 <sup>-4</sup>	1.50 * 10 <sup>-3</sup>

The values for 1 and 2 years mean that the calculated PFD<sub>avg</sub> values are within the permitted range for SIL 2 according to Table 2 of IEC/EN 61508-1. They meet the requirement to not cover more than 10% of the safety circuit, i.e., they are better than or equal to 1.00 \* 10<sup>-3</sup>.

The value for 5 years means that the calculated PFD<sub>avg</sub> values are within the permitted range for SIL 2 according to Table 2 of IEC/EN 61508-1. However, they do not meet the requirement to not cover more than 10% of the safety circuit, i.e., to be better than or equal to 1.00 \* 10<sup>-3</sup>.

### Failure limit

Based on an operating mode with a low demand rate. The percentage of the device at PFH/PFD for the entire safety loop is less than 10%.

Safety circuit according to IEC / EN 61508-1			
Sensor	Device	Processing	Actuator
25 %	< 10 %	15 %	50 %

### 10.8 Conditions

- The failure rates of the components used remain constant throughout the period of use.
- The propagation of errors by the device in the system is not taken into consideration.
- Errors during parameterization are not taken into consideration.
- The repair time (replacement) should be eight hours.
- The failure rates of the external power supply are not taken into consideration.
- Line fault detection is enabled.
- The average temperature at which the device is to be used is +40°C. In this case, normal industrial conditions are assumed.
- The specified error rates are based on an ambient temperature of +40°C. For an ambient temperature of +60°C, the error rates must be multiplied by factor 2.5. Factor 2.5 is based on guide values.

### 10.9 Installation and startup



**NOTE:** Installation, operation, and maintenance may only be carried out by professionals.

During installation, observe the instructions in the package slip:

Designation	MNR No.
PACKB.MACX MCR-SL-2NAM-RO(-SP)	9049386
PACKB.MACX MCR-EX-SL-2NAM-RO(-SP)	9040234

The package slip is supplied with the device. It can also be downloaded at: [phoenixcontact.net/products](http://phoenixcontact.net/products).

- Configure the device according to your safety demand in accordance with the truth table. Note the switch positions that are not permitted for safety-related applications.
- Connect the device according to the installation notes.
- Check that the device operates correctly with the sensor or switch with resistance circuit connected.
- Start up the safety circuit and check that it operates correctly.

### 10.10 Notes on operation

In normal operation, only the green LED (PWR) is permanently on.

The yellow LEDs (OUT1/OUT2) indicate the switching state of the relay output.

When line fault detection is enabled, the red LEDs (LF1/LF2) indicate any faults that occur. The safe state is entered in the event that a line fault is detected or the supply voltage fails.

### 10.11 Startup and restart

#### Switch on or restart the device

The output enters the state without oscillation (according to the truth table). A reset is not required.

#### What happens when a line fault is detected and what must the user do?

The fault is indicated by the red LED and the output enters the “non-conductive” state regardless of the input signal and operating mode (normal or inverse mode).

The user must eliminate the line fault (short circuit or break in the sensor cable).

The device output is not blocked when fault detection is triggered (no lock or reset). Undefined line states that occur during repairs can switch the output. The user must prevent this from happening by disconnecting the supply voltage or removing the connection terminal blocks.

Other options that have the same result and do not present an additional hazard are also permitted.

#### The line fault is removed

The user must ensure that a defined state is entered using the truth table. The device is restarted in the same way as during initial startup. The device then behaves as described under “Startup or restart of the device”.

### 10.12 Recurring checks

The function of the entire safety loop must be checked regularly according to IEC/EN 61508 and IEC/EN 61511.

The intervals for checking are specified by the intervals of each individual device within the safety loop.

It is the operator's responsibility to select the type of checks and the checking intervals in the specified time period.

Checking must be carried out in such a way that the correct function of the safety equipment in conjunction with all components can be verified.

#### Possible procedure for recurring checks for discovering dangerous and undetected device failures

1. Apply an appropriate signal at the input of the device in order to obtain the non-conductive state at the output.
2. Check whether the output is non-conductive.
3. Check the conductive state in the same manner.
4. Restore the safety circuit to full functionality.
5. Resume normal operation.

Around 99% of the possible “du” (“dangerous undetected”) failures in the device are discovered with this test.

If the device fails the function test, it must be taken out of operation and the process put into a safe state by other means.

### 10.13 Repair

The devices have a long service life, are protected against malfunctions, and are maintenance-free.

However, if a device should fail, send it back to Phoenix Contact immediately. The type of malfunction and possible cause must also be stated.

Please use the original packaging or other suitable safe packaging when sending devices back for repairs or recalibration.

Phoenix Contact GmbH & Co. KG  
Abteilung Service und Reparatur  
Flachmarktstr. 8  
32825 Blomberg  
GERMANY

## 10.14 Standards

The devices are developed and tested according to the following standards:

- IEC/EN 61508: 2001** Functional Safety of electrical/electronic/programmable electronic safety-related systems  
**IEC/EN 61326-1: 2006** Electrical equipment for measurement, control and laboratory use - EMC requirements

## 10.15 Abbreviations

Abbreviation		Meaning
DC <sub>D</sub>	Diagnostic coverage of dangerous failures	Diagnostic coverage of dangerous failures: $DC_D = \lambda_{DD}/(\lambda_{DU} + \lambda_{DD})$
DC <sub>S</sub>	Diagnostic coverage of safe failures	Diagnostic coverage of safe failures: $DC_S = \lambda_{SD}/(\lambda_{SU} + \lambda_{SD})$
FIT	Failure in time	1 FIT = 1 failure/10 <sup>9</sup> h
HFT	Hardware fault tolerance	Hardware fault tolerance: ability of a function unit to continue with the execution of a demanded function despite existing faults or deviations
$\lambda_D$	Rate of dangerous failures	Proportion of dangerous failures per hour
$\lambda_{DD}$	Rate of dangerous detected failures	Proportion of detected dangerous failures per hour
$\lambda_{DU}$	Rate of dangerous undetected failures	Proportion of undetected dangerous failures per hour
$\lambda_S$	Rate of safe failures	Proportion of safe failures per hour
$\lambda_{SD}$	Rate of safe detectable failures	Proportion of detectable safe failures per hour
$\lambda_{SU}$	Rate of safe undetectable failures	Proportion of undetectable safe failures per hour
MTBF	Mean time between failures	Mean time between consecutive failures
PFD <sub>avg</sub>	Average probability of failure on demand	Average probability of dangerous failure on demand of a safety function
PFH <sub>D</sub>	Probability of a dangerous failure per hour	Probability of failure per hour for the safety function
SFF	Safe failure fraction	Proportion of safe failures: proportion of failures without the potential to set the safety-related system to a dangerous or impermissible function state
SIL	Safety integrity level	International standard IEC 61508 defines four discrete safety integrity levels (SIL 1 to 4). Each level corresponds to a probability range for the failure of a safety function. The higher the safety integrity level of safety-related systems, the lower the probability that the demanded safety functions will not be performed.